



SubDrive Solar Controller - User Defineable Parameters

Description	Parameter	Values	
Factory Reset	rSt	yes	Restores Parameters to factory default settings
		no	Flashes "no" after "yes" is selected. Indicates this value, as well as others, has been reset to factory default.
# of Control Switch Inputs	P1	2	Sets number of control switches if used.
		1	If only one switch is required it must go in the "Run" terminal
		0	Count should include only run/stop control switches, but not the flow
Underload Trip Sensitivity (%)	P2	100	Sets the underload trip sensitivity (%)
		50	Up/Down 30-100% by 1
		30	
Select Reset Rule Type	P3	on	= Fixed Reset Rule ON
		off	= Dynamic Reset Rule ON Turns on/off fixed reset rule
Select Fixed Reset Rule Time	P4	80	Only effects operation if P3 = ON
		5	Up/Down 5-80 by 5 minutes
Enable Minimum Off Time	P5	on	"on" selection enables user to set a minimum "off" time of the system
		off	
Select Minimum Off Time Interval	P6	1	Only effects operation if P5 = ON
		10	1, 10-60 by 10 minutes
		60	